



Instruction Manual

34 Inch Gaming Monitor - BP34GM180WQ



Enjoy it.

CONTENTS

General Safety	4
Product Overview	8
Installation	10
Operation	15
Input Source	15
Brightness/Contrast	16
Color Setting	17
Picture Quality Setting	18
Display	19
Audio	20
OSD	21
Others	22
Specifications	23
Customer Helpline	Last Page

GENERAL SAFETY

Read this manual thoroughly before you start using the Monitor.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



The cover (or back) of the unit should not be removed to prevent risk of electric shock.

This unit must be serviced by a qualified service personnel only.



The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Using Cabinets or stands recommended by the manufacturer of the monitor.
- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the monitor or its controls and to call for an adult to assist.

GENERAL SAFETY (CONT.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not tamper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.

Installation

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this Monitor, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the adapter.

GENERAL SAFETY (CONT.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.
- Make sure to always carry Monitor from the sides, always be sure to have assistance by another person. Do not carry the Monitor from the middle.

WARNING!

Toppling furniture and Monitor's can cause serious injury or death.

If a monitor is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the monitor.
- Only using furniture that can safely support the monitor.
- Ensuring the monitor is not overhanging the edge of the supporting furniture.
- Not placing the monitor on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the monitor to a suitable support.
- Not standing the monitor on cloth or other materials placed between the monitor and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the monitor or its controls.

GENERAL SAFETY (CONT.)

 
 
 
 
Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the Monitor set near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the Monitor set.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.




The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.


PRODUCT OVERVIEW

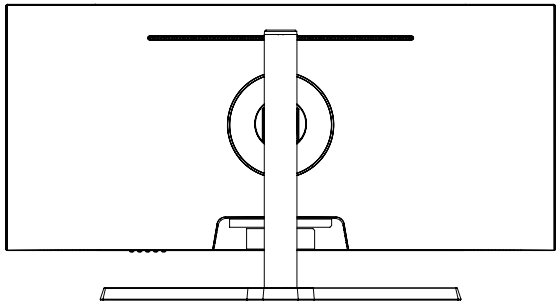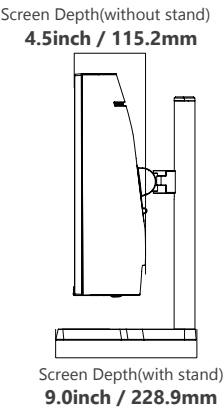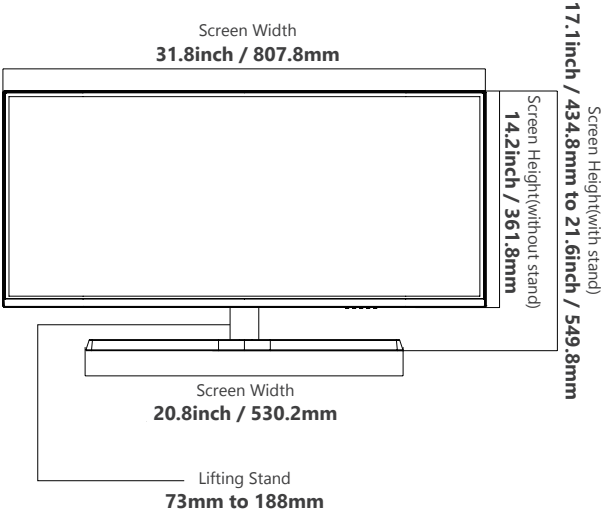


PRODUCT OVERVIEW (CONT.)

 

34-inch Monitor

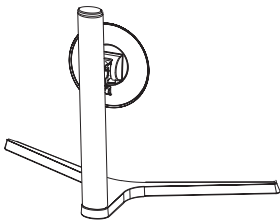 


Stand

 


Power Adapter



 
Stand Screw M8x21.5mm x1

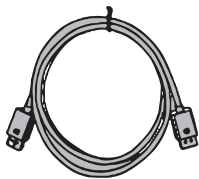

DP Cable

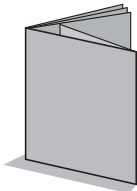 




User Manual

 

Warranty Card

INSTALLATION

   
Attaching the Stand

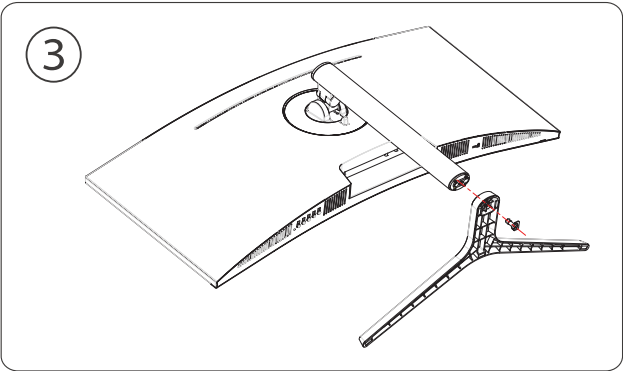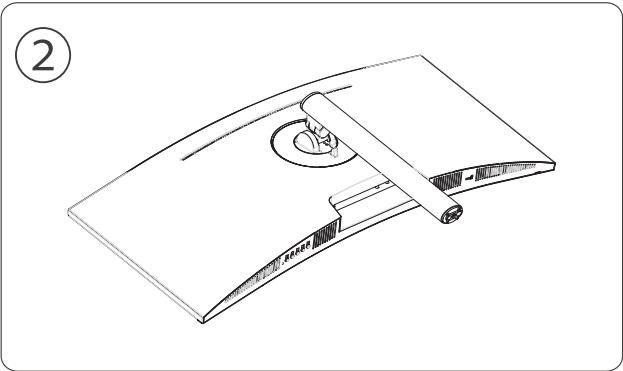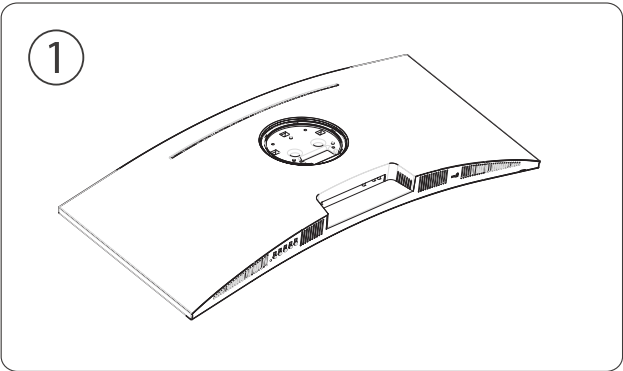

INSTALLATION (CONT.)

Interfaces, Controls & Settings

 - The color and shape of parts may differ from what is shown. Specifications are subject to change without notice to improve quality.

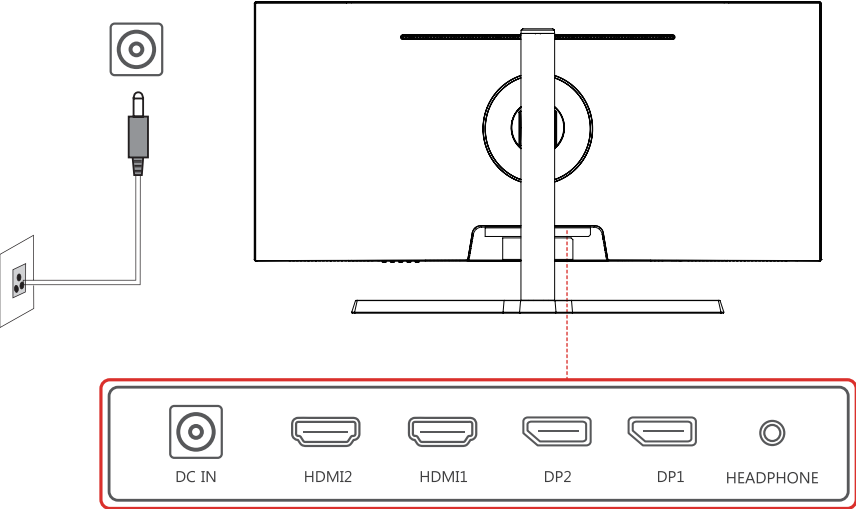


Port	Description
 DC IN	Connect to the DC adapter. The main power input of monitor, DC12V
 HEADPHONE	3.5mm HEADPHONE port.
 DP1/2	Connect to a source device using an DP cable.
 HDMI1/2	Connect to a source device using an HDMI cable.

***WARNING:** Always use the appropriate power cord.

INSTALLATION (CONT.)

Control Panel

 - The color and shape of parts may differ from what is shown. Specifications are subject to change without notice to improve quality.

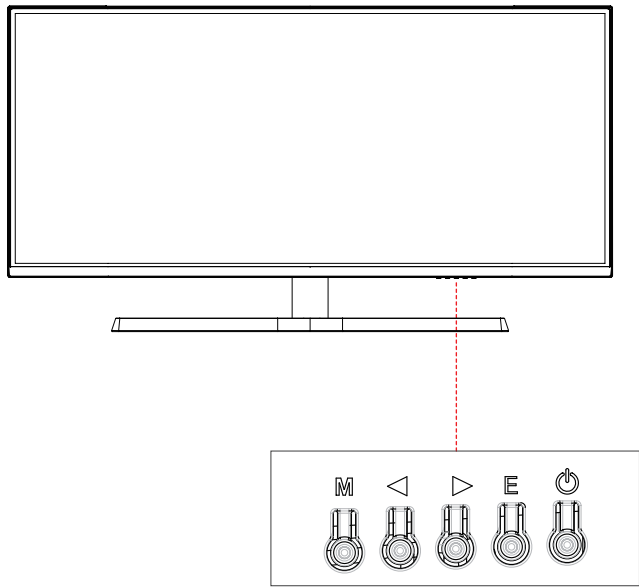

INSTALLATION (CONT.)

Monitor Button	Action
M	Open the OSD Menu. Confirm the selection to enter the sub-menu/option.
◀	Press to move the option to the desired menu/settings and adjust on submenu. Crosshair Shortcut Button During Gaming.
▶	Press to move the option to the desired menu/settings and adjust on submenu. Brightness adjustment shortcut button.
E	Select signal source or Exit OSD.
⏻	Power ON/OFF the monitor.

INSTALLATION (CONT.)

Initial Setup

Connect the monitor to a power outlet.

1. Press the Power button on the monitor to turn it on (The indicator will turn blue).
2. Connect the monitor to your device with a HDMI cable or other DP cable to the corresponding input on the monitor. The input source will be automatically.
3. To change between inputs, press the "■" button to enter the source menu. Use the "◀" and "▶" buttons to choose the input source between DP1, DP2, HDMI1 and HDMI2.



Note:

The refresh rate will be up to 100Hz while using HDMI(2.0)

The refresh rate will be up to 180Hz while using DP(1.4)

OPERATION

A. Input Source

DP1

Resolution: 3440x1440 @180Hz

Input Source

Brightness/Contrast

Color Setting

Picture Quality Setting

Display

Audio

OSD

Other

• DP1

DP2

HDMI1

HDMI2

Input Source: DP1

Resolution: 3440x1440 @180Hz

Option	Description
Input Source	Set input source to DP1 / DP2 / HDMI1 / HDMI2

OPERATION (CONT.)

B. Brightness/contrast

DP1

Resolution: 3440x1440 @180Hz

Input Source	Brightness	80
Brightness/Contrast	Contrast	50
Color Setting	DCR	Off
Picture Quality Setting	ECO	Off
Display	MPRT	Off
Audio		
OSD		
Other		

Input Source: DP1
Resolution: 3440x1440 @180Hz

Option	Description	Value
Brightness	Adjust the display brightness value	0-100
Contrast	Adjust the display contrast value	0-100
DCR	Turn the Dynamic Contrast Ratio function	On/Off
ECO	Turn the ECO function	On/Off
MPRT	Turn the MPRT function	On/Off

OPERATION (CONT.)

C. Color setting

DP1

Resolution: 3440x1440 @180Hz

Input Source	Gamma	2.2
Brightness/Contrast	Picture Mode	Standard
Color Setting	Color Temperature	Normal
Picture Quality Setting	Hue	50
Display	Saturation	50
Audio	Low Blue Mode	0
OSD		
Other		

Input Source: DP1
Resolution: 3440x1440 @180Hz

Option	Description	Value
Gamma	Adjust the display Gamma value	1.8/2.0/2.2/2.4/2.6
Picture Mode	Set the picture mode options	Standard/Photo/ Movie/Game
Color Temperature	Set the display color temperature options	Normal/Warm/ Cool/User
Hue	Adjust the display Hue value	0-100
Saturation	Adjust the display saturation value	0-100
Low Blue Mode	Adjust the display low blue mode value	0-100

OPERATION (CONT.)

D. Picture Quality Setting

DP1

Resolution: 3440x1440 @180Hz

Input Source	Sharpness	50
Brightness/Contrast	Response Time	Off
Color Setting		
Picture Quality Setting		
Display		
Audio		
OSD		
Other		

Input Source: DP1
Resolution: 3440x1440 @180Hz

Option	Description	Value
Sharpness	Adjust the display sharpness value	0-100
Response Time	Turn the response time function	Off/Low/Middle/High

OPERATION (CONT.)

E. Display

DP1

Resolution: 3440x1440 @180Hz

Input Source	Aspect Ratio	Wide Screen
Brightness/Contrast		
Color Setting		
Picture Quality Setting		
Display		
Audio		
OSD		
Other		

Input Source: DP1
Resolution: 3440x1440 @180Hz

Option	Description	Value
Aspect Ratio	Select the image aspect ratio	Wide Screen/4:3

OPERATION (CONT.)

F. Audio

DP1

Resolution: 3440x1440 @180Hz


Input Source	Mute	Off
Brightness/Contrast	Volume	50
Color Setting		
Picture Quality Setting		
Display		
Audio		
OSD		
Other		

Input Source: DP1
Resolution: 3440x1440 @180Hz

Option	Description	Value
Mute	Turn the audio source mute function	On/Off
Volume	Adjust the audio source volume value	0-100

OPERATION (CONT.)

 
G. OSD

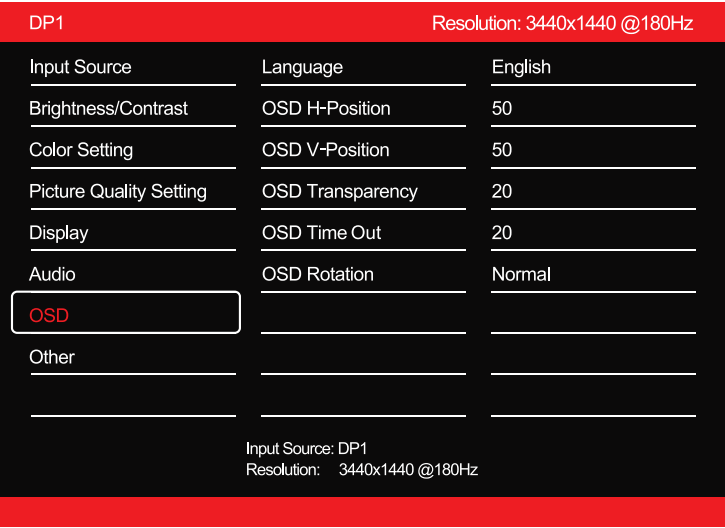

Option	Description	Value
Language	Set the OSD Menu display language options	English/etc.
OSD H.Position	Adjust the horizontal position of the OSD Menu	0-100
OSD V.Position	Adjust the vertical position of the OSD Menu	0-100
OSD Transparency	Adjust the transparency value of the OSD Menu	0-100
OSD Timeout	Adjust the OSD Menu how long before it automatically exits	0-60
OSD Rotation	Rotate the OSD Menu	Normal/90/180/270

OPERATION (CONT.)

 H. Others

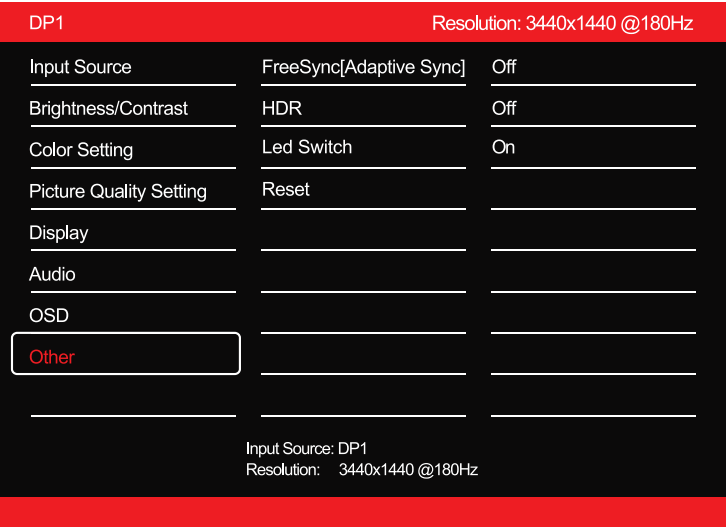

Option	Description	Value
FreeSync	Turn the FreeSync function	On/Off
HDR	Turn the HDR function	Auto/Off/On
Led Switch	Turn the LED function	On/Off
Reset	Restore the factory settings	/

SPECIFICATIONS

Model	BP34GM180WQ
Size	34"
Refresh Rate	Max.180Hz
Response Time	MPRT 1ms
Resolution	WQHD 3440x1440
Aspect Ratio	21:9
Panel	VA
Viewing Angle	178°(H)/178°(V)
Brightness (Max)	250cd/m²
Display Color	16.7 Million Colors (8bit)
Contrast Ratio	4000:1
Speaker	No
VESA Mount	75x75mm
Ports	HDMI x 2 / DP x 2 / HEADPHONE x 1
HDR	Support (require HDMI port)
FreeSync	Support (require DP port)
Input	DC 12V/5A
Power Consumption	≤ 60W
Operating Temperature	32~122°F(0~50°C)

Important Note: The specification may be changed without prior notice



CUSTOMER SUPPORT:

info@ayonz.com / 02 8279 8606

DISTRIBUTED BY:

Ayonz Pty Ltd