



Instruction Manual

2.1ch Soundbar with Built-in Subwoofer - COB2CH60W3



Enjoy it.

CONTENTS

General Safety Instructions	4
Remote Control	7
Product Overview	9
Controls and Connections	10
First Time Setup	11
General Operations	12
Specifications	15
Customer Service	Last Page

GENERAL SAFETY INSTRUCTIONS

Read this manual thoroughly before you start using the Soundbar.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.

IMPORTANT INFORMATION

- Use only furniture that can safely support the product.
- Ensure the product does not overhang the edge of the supporting furniture
- Do not place the product on high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children about the dangers of climbing on furniture to reach the soundbar or its controls, and instruct them to ask an adult for assistance
- Do not expose the product to rain or moisture, as this may result in a fire or electric shock hazard.
- Do not tamper with, change, or modify the product in any way.
- Use only accessories specified and recommended by the manufacturer.
- Do not expose the product to splashing or direct contact with water.
- Do not place any objects on top of the product.

GENERAL SAFETY INSTRUCTIONS (Cont.)

Please follow the instructions when installing this product, in accordance with the instruction manual. This product must be positioned in a sufficiently stable location. It can be potentially hazardous if it falls when mounted incorrectly and may cause injury, particularly to children.

- Before installing the soundbar, ensure that your outlet voltage corresponds to the voltage stated on the power supply rating label.
- The apparatus must not be exposed to dripping or splashing, and no objects filled with liquids—such as vases—should be placed on the product. For dry location use only.
- No naked flame sources, such as candles, should be placed on or near the product.
- Do not obstruct the ventilation openings. Proper ventilation must be maintained at all times.
- Do not plug multiple devices into the same outlet, as this may cause the outlet to overheat and start a fire. Ensure the outlet remains easily accessible during operation.
- Unplug the soundbar during lightning storms or when unused for long periods. Failure to do so may result in fire or electric shock.
- Do not cover the ventilation openings with items such as newspapers, tablecloths, or curtains.
- Do not insert objects into the product's openings, as this may damage the unit and cause a fire hazard.

GENERAL SAFETY INSTRUCTIONS (Cont.)

- If you notice any unusual odors or smoke coming from the unit, immediately disconnect it from the power outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for extended periods, or when moving it, always disconnect the power supply from the wall socket.
- Be aware that dust may accumulate on the unit over time, causing it to generate heat or deteriorate insulation, which may result in an electrical fire.
- This product is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or by young children of any age. They must be supervised by a person responsible for their safety.
- Batteries in the remote control should be removed only by an adult. Keep batteries out of reach of infants and children. Seek medical attention immediately if a child swallows a battery.
- To clean the product, do not use chemical cleaners, cleaning agents, or wet cloths. Use a dry cloth to remove marks or dust, and only after unplugging the product from the power socket.
- For any repairs or servicing, please contact our customer service center.
- Wall-mounted installation must be carried out only by qualified personnel. Incorrect installation may result in serious personal injury, electric shock, or fire hazards.


Please ensure that when positioning this product, the location is:

- Dry, well-ventilated, and not damp.
- Away from direct sunlight and heat sources such as heaters or radiators.
- Away from splashes, food, or any source of moisture.
- Protected from excessive dust or grease.
- Not enclosed in a confined space such as a bookcase or cabinet. Allow at least 20 cm of space above and 5 cm on both sides for proper ventilation.
- Not placed near heat sources such as radiators, stoves, or other audio-visual equipment that generate heat.
- Free from containers holding liquids. If liquid enters the product, it may cause a short circuit, fire, or electric shock.
- Free from small metallic objects placed on top of the unit.
- Clear of flammable or combustible materials. Do not place naked flame sources, such as lit candles, cigarettes, or incense sticks, on or near the soundbar, as this may cause fire or explosion.

REMOTE CONTROL

Remote Control Use and Care

- The remote control has a reception range of approximately 5 meters. Always point it directly toward the sensor on the front of the soundbar.
- Ensure there are no obstacles blocking the sensor, as this may interfere with signal reception.
- Handle the remote control with care—do not drop it, apply excessive force, or step on it.
- Do not spill liquids on the remote control.
- Avoid using the remote control simultaneously with other infrared remote devices near the unit, as this may cause incorrect operation.
- If the remote control will not be used for a month or longer, remove the batteries to prevent leakage or corrosion.

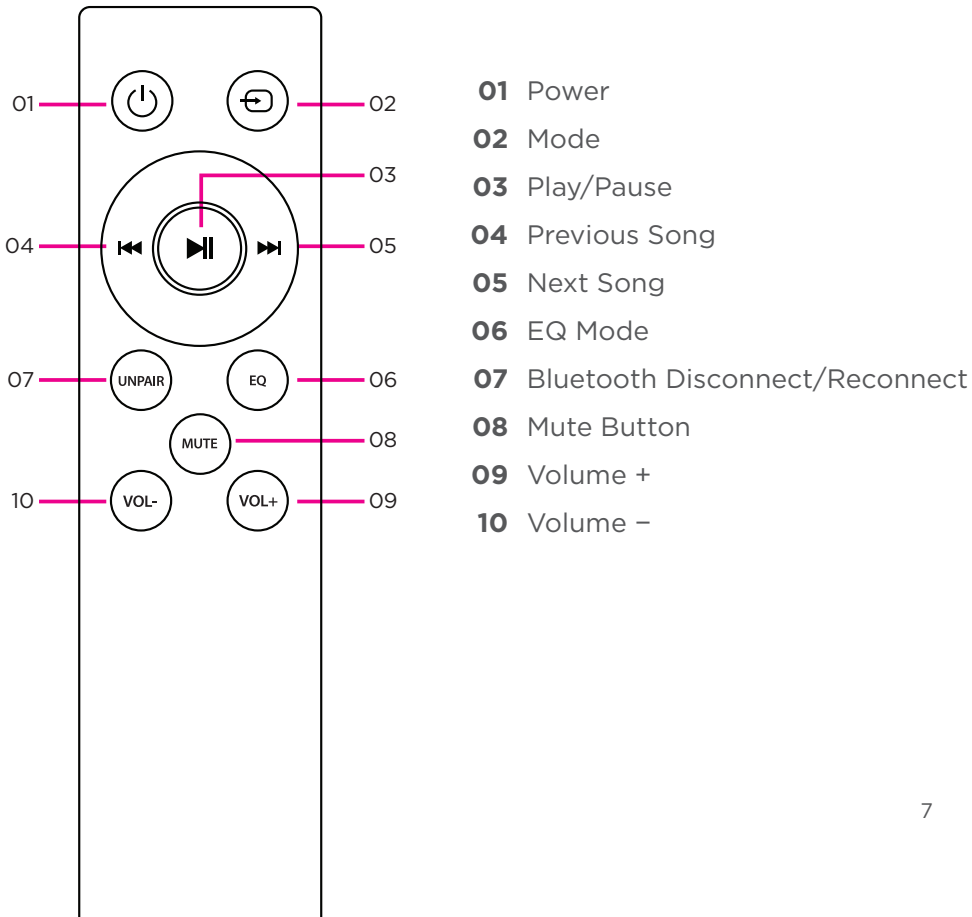


REMOTE CONTROL (Cont.)

CAUTION!


Battery Precautions

- Use only the batteries specified in this manual.
- There is a risk of explosion if the battery is replaced with an incorrect type.
- Do not store batteries with metallic objects, as this may cause the battery to short-circuit, leak, or explode.
- Keep batteries away from excessive heat, direct sunlight, and fire.
- Do not short-circuit, disassemble, or dispose of the battery in fire.
- Dispose of used batteries promptly and properly, following local hazardous waste regulations.

To insert new 2 x AAA batteries or replace current batteries, at the back of the remote control remove the cover of the battery compartment and insert the 2 x AAA batteries ensuring that the + sign on the battery is facing toward the + sign marked within the battery compartment.

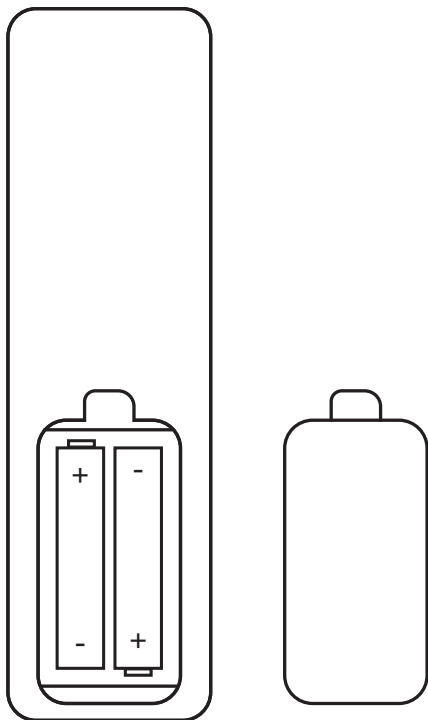

PRODUCT OVERVIEW

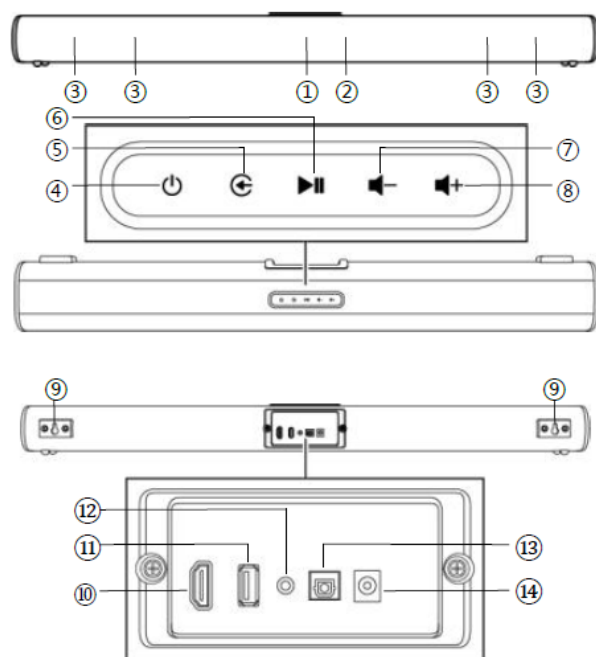

- 01** LED Display
- 02** Remote Control Infrared Receiver
- 03** Speaker Driver
- 04** Power Button
- 05** Mode Switch
- 06** Play/Pause Button
- 07** Volume -
- 08** Volume +
- 09** Wall Mounting Hole
- 10** HDMI Port
- 11** USB Port
- 12** AUX Input
- 13** Optical Input
- 14** Power Interface

CONTROLS AND CONNECTIONS


HDMI

Connect a HDMI cable (not supplied) from your TV HDMI/ARC port to the HDMI socket on the soundbar. Then change the mode on your soundbar to HDMI Mode.

Note: To enable the Audio Return Channel (ARC) feature, the HDMI must be connected to an ARC enabled HDMI on your TV. (go to next page for details on ARC).

OPTICAL

Remove protective cap from the Optical socket on the soundbar and plug in the optical cable (not supplied) from your Soundbar to the TV optical port.

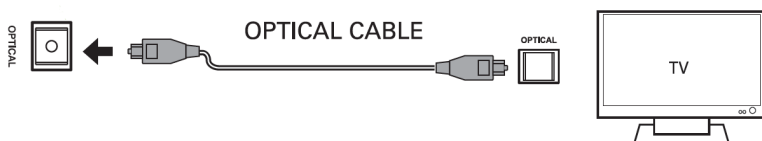

Once connected, change the Mode to OPTICAL from the unit or remote control.

Note: If there is no sound and Optical light is flashing quickly, make sure that the audio settings on your TV is set to appropriate mode.

IMPORTANT INFORMATION

This unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby (Refer to the user manual of the input source device for its audio setting details) with optical.

CONTROLS AND CONNECTIONS (Cont.)

AUDIO RETURN CHANNEL (ARC) / HDMI

ARC function is used for connecting the Soundbar to the TV with a HDMI cable through an audio return channel. This means you can listen to the TV sounds through your Soundbar via HDMI cable.

To enjoy the HDMI ARC Mode

1. Make sure the Soundbar is connected to the TV HDMI(ARC) port.
2. Ensure the Soundbar is set to HDMI Mode
3. The sound should relay through the soundbar and you can also adjust the volume of the sound thats coming through the soundbar with your TV remote control.

Note: If the sound does not automatically produce from the soundbar, TVs may need to be set onto HDMI (CEC) turned on within the TV settings, with some of them having options to turn on ARC mode directly.

FIRST TIME SETUP

To connect Soundbar successfully

1. Make sure to plug in the soundbar into a power connection.
2. Press the power button on RC or side of soundbar.
3. You can now commence using soundbar and press the “M” button on remote control to pick an Input source.

GENERAL OPERATION

POWER BUTTON

- When the device is off, press and hold the  for 2 seconds to turn it on.
- When the device is on, press and hold the  for 2 seconds to turn it off.
- When powered on in Bluetooth mode, if it remains in a paused state, it will automatically shut down after about 15 minutes.

BLUETOOTH MODE

- Turn on the device to enter Bluetooth mode. If it does not automatically enter Bluetooth mode, turn off the device and then turn it on again. Short press the Mode button to switch to Bluetooth mode. A prompt tone will be heard.
- Bluetooth devices can search for the Bluetooth name COB2CH60W3 for pairing and connection.
- During the Bluetooth pairing process, "BT" will flash on the display for about 10 seconds. When pairing is successful, a prompt tone will be heard.
- Short press the  button to play or pause music.
- Short press the  button to switch songs.
- Long press the  buttons to adjust the volume. A prompt tone will sound at maximum volume. If the volume is too low, check the connected device to ensure its volume is set appropriately.

Note: Keep the distance between connected Bluetooth devices under 33 feet (10 meters) to ensure stable operation.

AUX MODE

- Short press the  button to switch to AUX mode. Plug in the AUX cable, and the soundbar will play the input audio.

USB MODE

- Short press the  button to switch to USB mode. Insert the USB drive, and the soundbar will play the input audio.

HDMI MODE

- Short press the  button to switch to HDMI mode. Plug in the HDMI ARC cable, and the soundbar will play the input audio.

GENERAL OPERATION (Cont.)

OPTICAL MODE

- Short press the  button to switch to OPTICAL mode. Plug in the optical cable, and the soundbar will play the input audio.

REMOTE CONTROL OPERATIONS

- Short press the  button to turn the soundbar on or off.
- Short press the  button to switch between Bluetooth, HDMI, OPTICAL, AUX, and USB modes.
- Short press the  button to play or pause music.
- Short press the  button to skip to the previous or next song.
Note: This button functions only in Bluetooth and USB modes and has no effect in other modes.
- Short press the **UNPAIR** button to disconnect the Bluetooth connection between the soundbar and the device. Press the button again to reconnect.
- Short press the **MUTE** button to enter silent mode. Press it again to exit silent mode.
- Short press the **EQ** button to switch between three different equalizer modes (E1, E2, E3).
- Press the **VOLUME -** / **VOLUME +** buttons to adjust the volume. A prompt sound will be heard at maximum volume.

SPECIFICATIONS

Input	18Vdc 2A
Frequency Response	Soundbar: 50Hz to 15kHz
Bluetooth	5.0, A2DP, AVRCP
Bluetooth Range	Up to 10m
Dimensions	Soundbar: 800 (w) x 100 (d) x 70 (h) mm
Weights	Soundbar: xx kg



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Ayonz Pty Ltd is under license. Other trademarks and trade names are those of their respective owners.



CUSTOMER HELPLINE:

info@ayonz.com
02 8279 8606

DISTRIBUTED BY:

Ayonz Pty Ltd