



Instruction Manual

32" Full HD 240Hz Curved Gaming Monitor - BP32GM240



Enjoy it.

CONTENTS

General Safety	4
Installation	
Attaching the Stand	8
Wall or Arm Mounting Instructions	9
Controls and Connections	10
Operation	
Brightness	12
Image	13
Color Setup.	14
OSD setting	15
Reset	16
MISC.	17
Specifications	18
Customer Helpline	Last Page

GENERAL SAFETY

Read this manual thoroughly before you start using the Monitor.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



The cover (or back) of the unit should not be removed to prevent risk of electric shock.

This unit must be serviced by a qualified service personnel only.



The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Using Cabinets or stands recommended by the manufacturer of the monitor.
- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the monitor or its controls and to call for an adult to assist.

GENERAL SAFETY (CONT.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not tamper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.

Installation

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this Monitor, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the adapter.

GENERAL SAFETY (CONT.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.
- Make sure to always carry Monitor from the sides, always be sure to have assistance by another person. Do not carry the Monitor from the middle.

WARNING!

Toppling furniture and Monitor's can cause serious injury or death.

If a monitor is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the monitor.
- Only using furniture that can safely support the monitor.
- Ensuring the monitor is not overhanging the edge of the supporting furniture.
- Not placing the monitor on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the monitor to a suitable support.
- Not standing the monitor on cloth or other materials placed between the monitor and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the monitor or its controls.

GENERAL SAFETY (CONT.)

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the Monitor set near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the Monitor set.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.



The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

 
INSTALLATION

Install the stand as described below, or if you want to mount it to a wall, please contact a professional installer. Please ensure the monitor is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

Attaching the stand


Step 1

Insert the Next of Stand into the Base of Stand, 2 x Screws (included) are to be screwed and fastened tightly. Once both screws installed, your stand will now be complete.

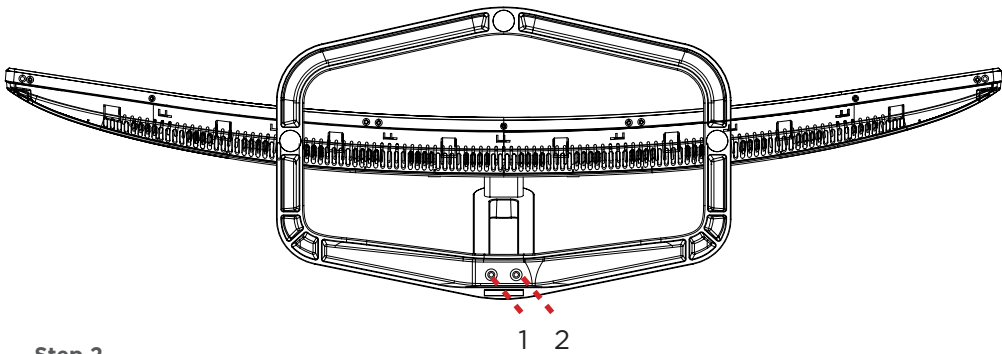

Step 2

 Gently lay the monitor on its front screen on a surface with a blanket to prevent scratches. Then install the top of the stand (the neck) into the back of the monitor and fasten the stand into the back of the monitor with 2 x Screws (included) as shown below.

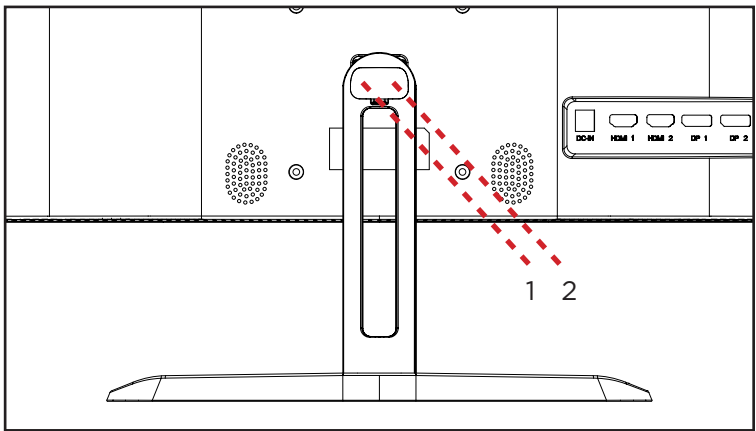

INSTALLATION (CONT.)

 
Wall OR Monitor Arm Mounting Instructions

Please ensure the Monitor is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.



- We recommend you use a professional installer as we assume no liability for any eventual damage to the product or injury to yourself if you mount the Monitor on your own.

BACK OF MONITOR

VESA PATTERN: 100 (w) x 100 (h) mm

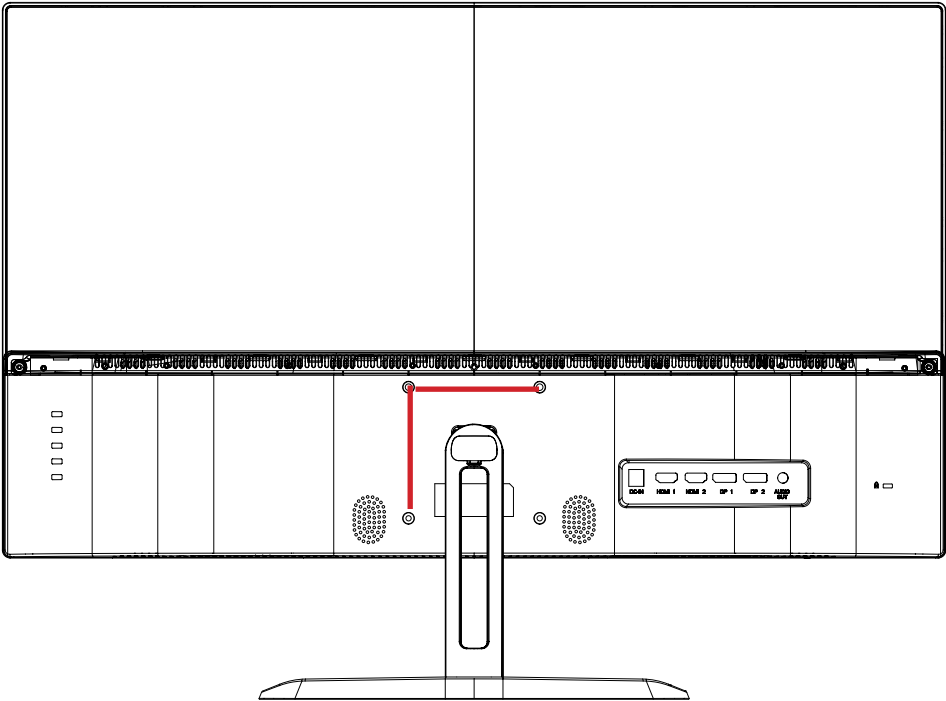

CONTROLS AND CONNECTIONS

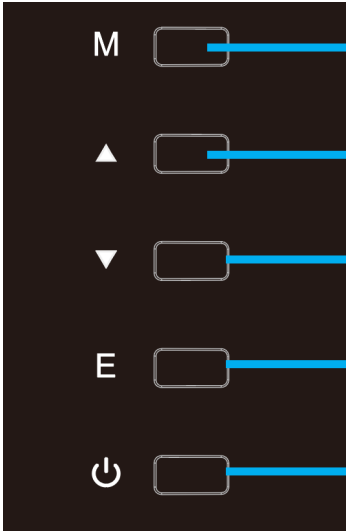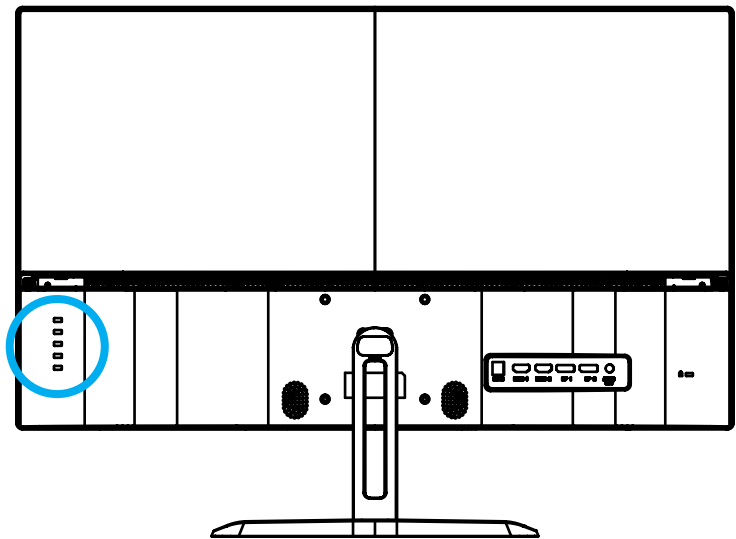  

M - MENU / SELECT

UP / VOLUME +

 
DOWN / VOLUME -

E - EXIT / AUTO FUNCTION

When you encounter blurry screen, blurred letters or screen flicker while using device, Press AUTO button to improve resolution

STANDBY POWER OFF/ON

CONTROLS AND CONNECTIONS

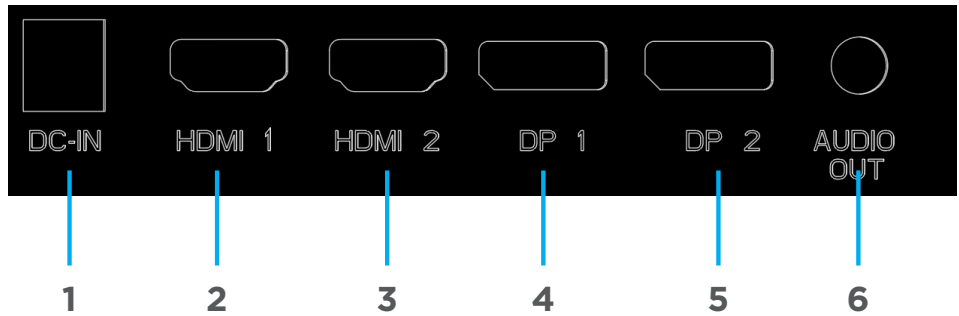

1. DC IN (POWER)
2. HDMI 1
3. HDMI 2
4. DISPLAY PORT 1
5. DISPLAY PORT 2
6. AUDIO OUT

 
HDR

To activate HDR, your PC must turn on HDR from windows settings.

To do this:

Windows > Settings > Display

- Select ON for “USE HDR” as shown below. This is the only way to set HDR for your monitor and your games to detect it.





120Hz to 240Hz Refresh Rate

The refresh rate is entirely dependant on your PC build. Your PC must be able to output in over 120 FPS (frames per second) to 240 FPS, to experience the full effect of your 240Hz Blaupunkt Gaming Monitor.

HOW TO ENABLE 120HZ OR MORE

  1. You must use a **DISPLAY PORT** cable. HDMI is not capable of more than 120Hz.
2. On your Windows PC - go to below menu.
Settings >
Display >
Advanced Display >
Choose a Refresh Rate. By clicking the refresh rate box below -
you will be able to adjust from 60Hz to 120Hz, 144Hz and 240Hz.

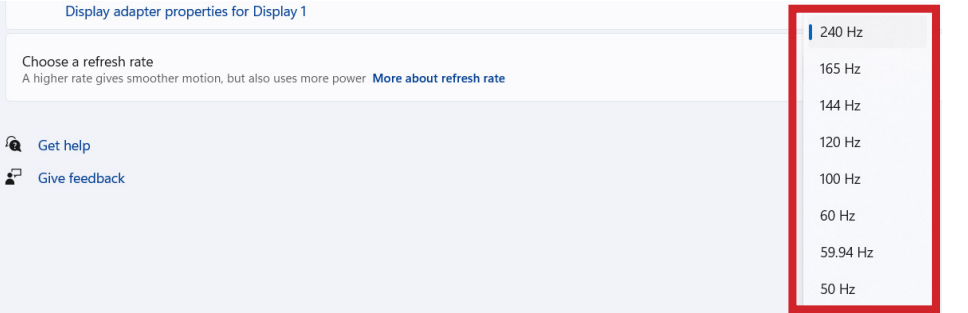

OPERATION

BRIGHTNESS

Press **MENU** button, and the main menu page will appear as follows: (BRIGHTNESS MENU), and then press MENU button to enter.

Input Source	Brightness	50 
Brightness/Contrast	Contrast	50
Color Setting	DCR	Off
Picture Quality Setting		
Display		
Audio		
OSD		
Other		

- BRIGHTNESS

To adjust the brightness of the screen.
- CONTRAST

To adjust the contrast of the screen.
- DCR

Automatically judge the overall brightness of the screen

OPERATION (CONT.)

IMAGE

Press ▼/▲ button to select **IMAGE**, and then press **MENU** button to confirm your selection. This item can adjust the configuration automatically.

Input Source	Aspect Ratio	WideScreen
Brightness/Contrast		4:3
Color Setting		1:1
Picture Quality Setting		Auto
Display		
Audio		
OSD		
Other		

ASPECT Wide: Adjust the image ratio to widescreen mode.
4:3 : Adjust the image ratio to 4:3 mode

OPERATION (CONT.)

COLOUR SETUP.

Press ▼/▲ button to select Color in the main menu, and then press **MENU** button to enter.

Input Source	Gamma	1.8
Brightness/Contrast	Picture Mode	2.0
Color Setting	Color Temperature	2.2
Picture Quality Setting	Hue	2.4
Display	Saturation	2.6
Audio		
OSD		
Other		

Gamma	English/Español/Français/Deutsch/Italiano/한국/简体中文
Picture Mode	To set the OSD language. Adjust the range of 0-100, To adjust the horizontal position of the OSD.
Color Temperature	Adjust the range of 0-100, To adjust the vertical position of the OSD.
Hue	Adjust the range of 0-4, To adjust the transparency of the OSD.
Saturation	Adjust the range of 5-60, To set automatic OSD exit time.

OPERATION (CONT.)

OSD SETTING

Press ▼/▲ button to select Color in the main menu, and then press **MENU** button to enter.

Input Source	Language	English
Brightness/Contrast	OSDH-Position	50
Color Setting	-OSDV-Position	50
Picture Quality Setting	OSD Transparency	20
Display	OSD Time Out	20 
Audio	OSD Rotation	Normal
OSD		
Other		

OPERATION (CONT.)

RESET/FREESYNC

Press ▼/▲ button to select **reset** in the main menu, and then press MENU button to enter.

Input Source	FreeSync(Adaptive Syne)	Off
Brightness/Contrast	Reset	On
Color Setting		
Picture Quality Setting		
Display		
Audio		
OSD		
Other		

SPECIFICATIONS

Resolution	1920 x 1080	
Display Colours	16.7 Million	
Brightness	280 cd/m2	
Refresh Rate	240Hz	
Power Source	12V  4A	
Dimensions	With stand: 719 (w) × 210 (d) × 531.4 (h) mm	
	Without stand: 719 (w) × 78.5 (d) × 423 (h) mm	
Accessories	1 x Instruction Manual	Monitor Stand
	1 x Warranty Card	1 x HDMI Cable
	1 x Power Adaptor	



CUSTOMER SUPPORT:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd